

dd Connection				
Connection name:				
General Applications				
Bearer:	3G		∨ Properti	es
3G Bearer Settings	5			
3G General	Internet Protocol	Proxy PPP	Security	
Access point na	<mark>am</mark> e:			
PDP type:		IP	~]	
				3
Service of the servic				

## 3G Bearer Settings

	appropriate IF	herwise, you nee settings.	u to dan y	oul	HIC	LYVU	in d	raffil	II 113	ud	LUI
0	) Obtain an IF	address automa	tically								
•	Use the follo	owing IP address									
IP	address:		0	100	0	18	0	33	0		
Si	ubnet mask:		0	93	0	98	0	98	0		
_	efault gatewa	aurii	0	931	0	281	0	281	0		
		server address a		ally							
•	) Obtain DNS ) Use the follo	server address a owing DNS serve	utomatica r address	995 V		**	n	***	٥		
• D	Obtain DNS Use the folk referred DNS	server address a wing DNS serve server:	utomatica r address		0			\$1	0		
e D	) Obtain DNS ) Use the follo	server address a wing DNS serve server:	utomatica r address					\$1)	0		
e Pi Al	Obtain DNS Use the folk referred DNS	server address a owing DNS serve server; server;	utomatica r address		0		0	**	0		